



TRAINING TABLE - DISPLAY UNIT ASSEMBLY INSTRUCTIONS

STOP

READ ALL INSTRUCTIONS PRIOR TO PROCEEDING

- This document is a comprehensive instruction for assembly of the Training Table Display Unit QS00212.
- Make sure to read, understand and follow all these instructions. Improper use of this product may result in personal injury.
- To address any questions related to ordering parts, troubleshooting, maintenance, service or anything else, contact a Q'Strait® authorized dealer.
- All deviations and alterations from these instructions **MUST** be reported to a Q'Strait® authorized dealer.




IMPORTANT SAFEGUARDS AND WARNINGS

- All equipment and components **MUST** be installed and serviced by an experienced and trained technician.
- **Users MUST never attempt to repair, adjust or modify any components of the Q'Pod Wheelchair Securement System and/or Seatbelts.**
- This system is a complete integrated system, do not alter or modify it in any way and do not interchange or substitute any components. Any deviation from these recommendations is the responsibility of the installer.
- **DO NOT allow webbing to get twisted inside the retractors or come in contact with sharp corners and edges.**
- **J-Hooks** must be attached to a solid wheelchair frame (no spokes or removable components) and **Rear J-Hooks** at approximate 30 - 45 degree angle with the floor.
- **Compliant Shoulder and Pelvic Belt Restraint** must go across occupant's shoulder and pelvis (lap), and not be worn twisted or held away from the occupant's body by wheelchair components. We recommend using both a pelvic and shoulder belt together and not individually since it will compromise the performance of the system.
- Make sure shoulder belt does not rub against the occupant's neck.
- **Keep loose articles of clothing away from retractors.**
- **Only use Q'Strait® components** with this system, unless otherwise stated.
- All damages and defects **MUST** be reported to Q'Strait® authorized dealer.
- Broken and worn components **MUST** be replaced.

SAVE THESE INSTRUCTIONS

ASSEMBLY METHOD

1. Carefully unpack and Identify each panel by its slot feature and thumb screw on the side faces. Fig. A
2. Identify each panel position by referring to the corresponding alignment letters on the underside of each panel. Fig. B.
3. Place each panel in their correct position and orientation by aligning and installing thumbscrews to mating slots. Fig. C & D.
3. Assemble shoulder belt display stand using two retaining pins included.
4. Align stand base hardware to mating slots on floor panel and slide into position. Tighten two knobs to secure in place.

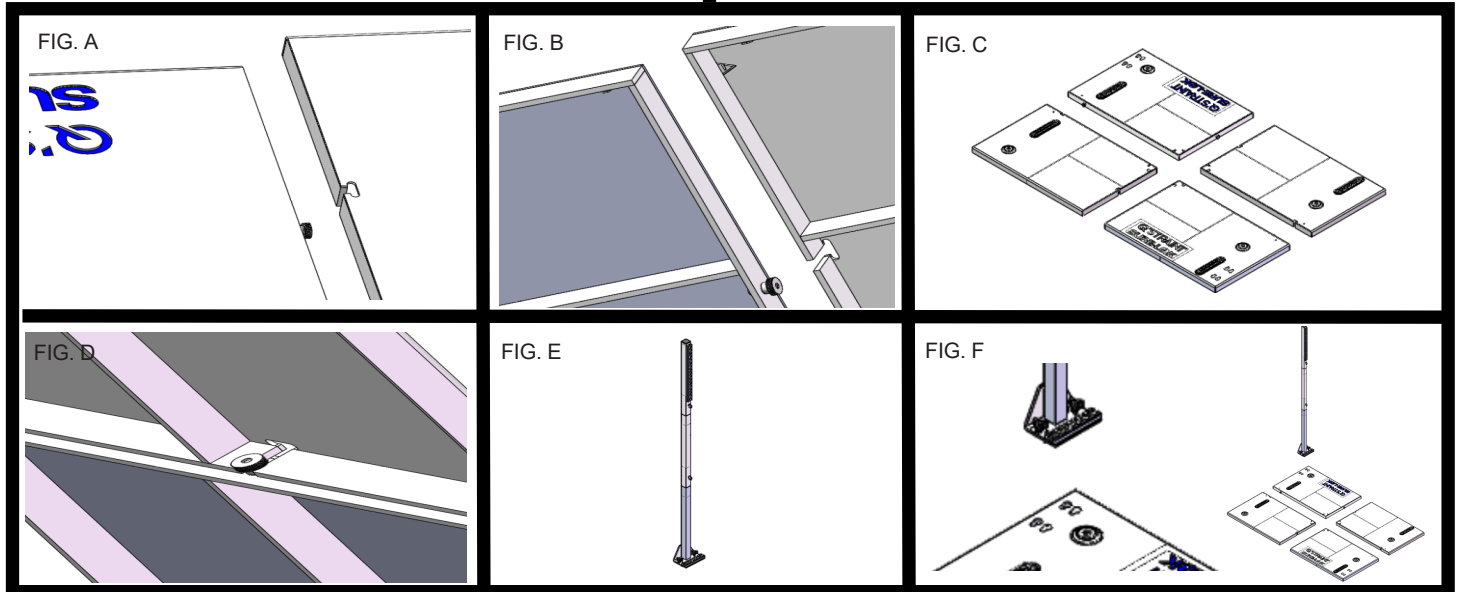

Q'STRAIN'T'S LIMITED WARRANTY: Q'Straint® warrants this product conforms to our manufacturing specifications and to be free from defects in materials and workmanship. Q'Straint® or its authorized dealer will (at its sole discretion), repair or replace the defective component(s) free of charge. This warranty does not cover the cost of assembly or disassembly, transportation, labor, or any other incidental costs involved in the removal of a defective part or the installation of the replacement part.

Q'Straint® or its authorized dealers reserves the right to inspect the product to verify the claimed defect has not been caused by non-Q'Straint® approved maintenance or by foreign particles or substances. This Warranty does not apply to defects that result from accident, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, negligence, exposure, or use of the product in a manner inconsistent with its intended use.

www.qstraint.com

This manual contains the most current information at the time of printing. Q'Straint® reserves the right to modify systems, components and content without notice.



This manual was printed on 30% post-consumer stock using vegetable oil based inks and is 100% recyclable.
© 2016 Q'Straint®. All Rights Reserved. QPOD® is a registered trademark of Q'Straint®, Inc.

? FOR TECHNICAL SUPPORT OR TO FIND YOUR NEAREST AUTHORIZED DEALER:

Q'Straint Europe
72-76 John Wilson Business Park
Whitstable, Kent, CT5 3QT
United Kingdom
Tel: +44 (0)1227 773035
Fax: +44 (0)1227 770035
Email: info@qstraint.co.uk

Q'Straint America
4031 NE 12th Terrace
Oakland Park, FL 33334
Tel: 800-987-9987
Fax: 954-986-0021
Email: qstraint@qstraint.com

Q'Straint Australia
Tramanco Pty Ltd.
21 Shoebury Street,
Rocklea, Australia, QLD 4106
Tel: +61 7 3892 2311
Fax: +61 7 3892 1819
Email: info@tramanco.com.au